

CLEANING THE CLEANAIR UNI MASK



Cleaning & Maintenance

After each work shift, clean the hood, check individual parts, and replace damaged ones.



Cleaning must be done in a well-ventilated room.

Avoid inhaling harmful dust deposited on individual parts of the filtration unit and accessories!



The face seal can be washed in a washing machine at a max temp. of 30 ° C. The face seal can be dried in a dryer at a speed not exceeding 800 rpm.

Wash the face seal separately - it must be removed from the mask before cleaning.



For cleaning of plastic parts use lukewarm water (up to +40 °C) with soap or another non-abrasive detergent, and a soft brush.

After cleaning individual parts with a damp cloth, it is necessary to rub them dry or let them dry at room temperature.



Care for the visors with a lens cleaning wipe. Do not use acetone or other cleaning solvents!



After cleaning individual parts with a damp cloth, it is necessary to rub them dry or let them dry at room temperature.

REPLACING THE VISOR

1. Shift the visor locks on both sides up (open) and remove the visor.
2. Place the new visor on the same spot and shift both locks on the sides back down (lock).
3. Make sure the visor fits properly.

REMOVING THE FACE SEAL

1. Remove the visor
2. Remove the face seal by pushing it out of the mask using your thumbs (the easiest way is to start on the side, just above the visor locks).