

ABSORBENT PRODUCT INSTRUCTIONS

SpillTech uses a mixture of the following absorbents in our spill kits. The instructions below set out how and when to use the different types of absorbents you'll find in this spill kit.

ABSORBENT SOCKS



USES:

Absorbent socks are used to contain a spill and stop it spreading. Place around the spill and overlap sock by at least 75mm. Once sock is fully saturated replace if necessary.

STYLES:

- Oil Only Polypropylene (white) - absorbs hydrocarbon liquids such as oil, diesel, & petrol and will repel water
- Chemical Polypropylene (yellow) - absorbs all liquid chemicals including oils, fuels, solvents, dyes & water
- General Purpose UltraZorb (grey) - absorbs oils and a wide range of chemicals

ABSORBENT PADS



USES:

Can be used in a variety of ways from small drips and leaks to large spill clean-up. Simply place on spill and allow liquid to be absorbed into material (approx 1 min), then replace and repeat.

ABSORBENT PILLOWS



USES:

Ideal for large spill clean up and placing under dripping taps, pipes or machinery. Allow spill liquid to absorb until pillow is fully saturated then replace and repeat if necessary.

SPILL-SORB CHEMICAL ABSORBENT PEAT



USES:

Ideal for large spill clean up and placing under dripping taps, pipes or machinery. Pour Spill-Sorb over spill starting from the outside and working in. Allow 5 minutes for the spill to be absorbed into the Spill-Sorb fibre then sweep into disposal bag. Repeat if spilled liquid or residue is still present.

For replacement components or spill response kits, contact your local SPILLTECH® distributor, or Dalton International Ltd on 0800 323 223.

www.spilltech.co.nz

SPILL RESPONSE PROCEDURE

1

BE SAFE


Make sure it's safe to clean up the spill. Check SDS sheets. Put on safety gear.



2

STOP THE SOURCE

Plug the leak, right the container or turn off the tap to stop the spill getting worse.

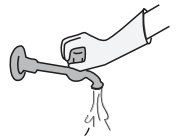

3

PROTECT THE STORMWATER

Stop the spill spreading using SpillTech absorbent socks. Block stormwater with a drain seal, or sand bags.



4

NOTIFY

Contact your supervisor. For major spills and those that reach stormwater contact your regional council pollution hotline:

AUCKLAND 09 377 3107 | **CANTERBURY** 0800 765 588 | **WAIKATO** 0800 800 401
OTAGO 0800 800 033 | **WELLINGTON** 0800 496 734



5

CLEAN UP

Use SpillTech absorbents to clean up spills. SpillTech absorbent pads, socks and pillows are ideal for smaller spills. SpillTech UltraZorb is best for large spills.



6

DISPOSE PROPERLY

Use a reputable waste disposal contractor to remove contaminated absorbents and clean up gear.



7

RE-ORDER & REVIEW

Replace all used spill kits and absorbents immediately. Review the cause of the spill and take action to prevent a repeat.



For replacement components or spill response kits, contact your local SPILLTECH® distributor, or Dalton International Ltd on 0800 323 223.

www.spilltech.co.nz